

Guidelines for using TV/VCR Rm 215

Using The VCR

Obtain the 2 remotes from the Linen Closet

Put the "TV" switch on the wall by the door in the "ON" position

Use the remotes to control the TV / VCR – please do not push buttons on the TV / VCR

BE SURE TO ALWAYS POINT THE REMOTE CONTROL TOWARD THE TV OR VCR WHEN USING IT TO CONTROL THE EQUIPMENT

The **Phillips** remote controls the TV; The **Panasonic** remote controls the VCR

Turn the TV on by pushing the "**Power**" button on the Phillips remote

Press the buttons "0" and "3" on the remote to change the TV to **channel 3**

Turn on the VCR by pushing the "**VCR Power**" button on the Panasonic remote

Put the videotape in the VCR player

Wait a few seconds, and if the tape does not automatically begin to play, push the "**Play**" button on the Panasonic remote

Volume is controlled by the << and >> buttons marked "**VOL**" on the Phillips remote.

When finished viewing the tape, press the "**STOP**" button on the Panasonic remote.

Press the "**Eject**" button on the right side of the VCR.

Turn off both the TV and the VCR by pressing the "**Power**" button on the respective remotes.

BE SURE TO RETURN BOTH OF THE REMOTES TO THE LINEN CLOSET